



(Actual Radio Appearance may differ from representation.)

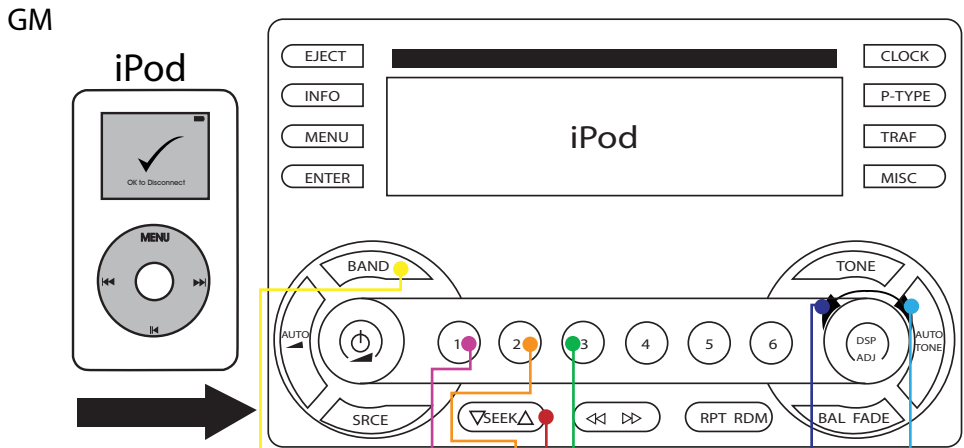


- Band Button.**
Press until XM is displayed to access the Media gateway.
- Preset #1**
Press to move back one step in the Browse menu.
- Preset #2**
a. Press to enter the Browse menu.
b. Press to select the displayed option and move to the next step in the Browse menu.
- ∇SEEK Δ button.**
a. Press SEEK Δ to advance to the next iPod song.
b. Press ∇SEEK to go back to the previous iPod song.
- Tune knob**
a. Turn Counter-clockwise to go back to the previous track.
b. Turn Counter-clockwise to go to the previous option in the browse menu.
- Tune knob**
a. Turn Clockwise to advance to the next track
b. Turn Clockwise to change to the next option in the browse menu.
- Preset #3**
Press to exit the Browse menu, without interrupting the currently playing song.

Browsing Example:
To select the song "Star-Spangled Banner" through the Artist category

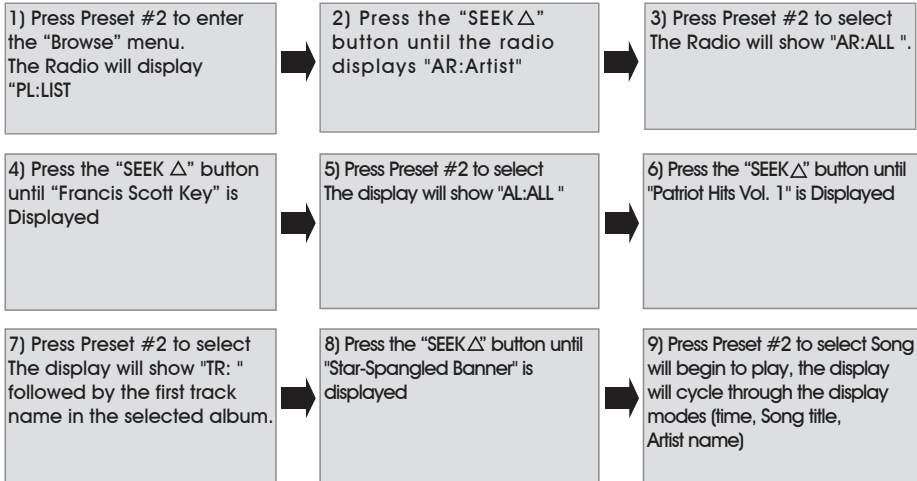

(Actual Radio Appearance may differ from representation.)



QRC011

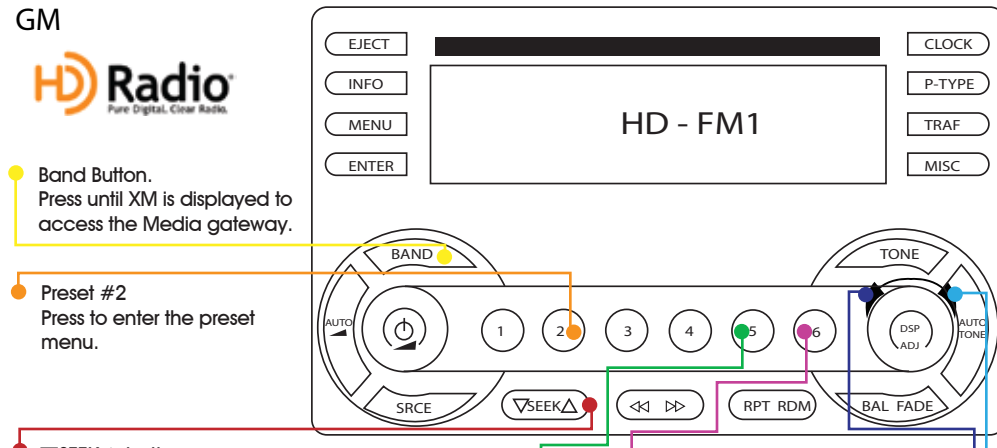


- Band Button.**
Press until XM is displayed to access the Media gateway.
- Preset #2**
Press to enter the preset menu.
- ∇SEEK Δ button.**
a. Press SEEK Δ to seek up to the next station.
b. Press ∇SEEK to seek down to the next station.

∇SEEK Δ button (when in preset menu)
c. In the preset menu, press SEEK Δ to recall the displayed station.
d. In the preset menu, press ∇SEEK to store the current station into the displayed preset location.
- Preset #5**
Press switch between the AM and FM bands.
- Preset #6**
Press to toggle the "Tune knob" function, between manual tuning and auto tuning.
- Tune knob**
a. Turn Counter-clockwise to seek down to the next station.
b. Turn Counter-clockwise to go to the previous preset in the preset menu.
- Tune knob**
a. Turn Clockwise to seek up to the next station.
b. Turn Clockwise to change to the next preset in the preset menu.

HD RADIO EXAMPLE
To select an HD radio station.

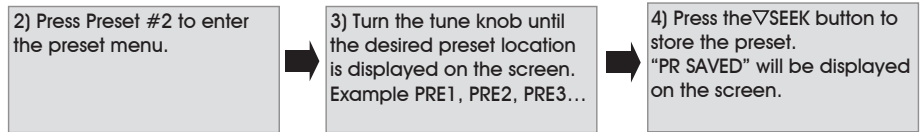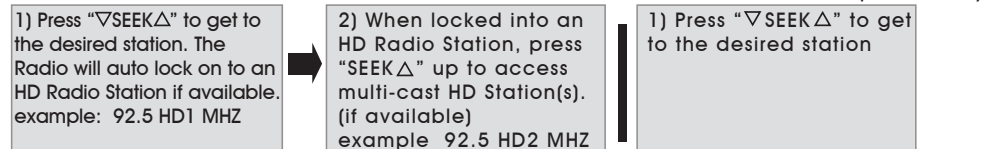

To recall a station stored into preset memory.

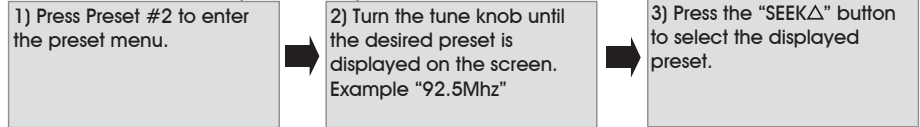

Changing Modes:

Press the "BAND" button until "XM" is displayed. When you enter the Satellite Radio mode, you will enter the mode select menu. Press the SEEK Δ button to cycle through the available gateway sources (iPod, HD Radio, Aux, and Satellite) When the desired mode is displayed on the screen, press Preset # 2 to select the mode.