


GM

****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "Band" button until "XM" is displayed.
- Press the "Seek Δ" button until the source you want is displayed.
- Press Preset 2 to select the source.

*if available

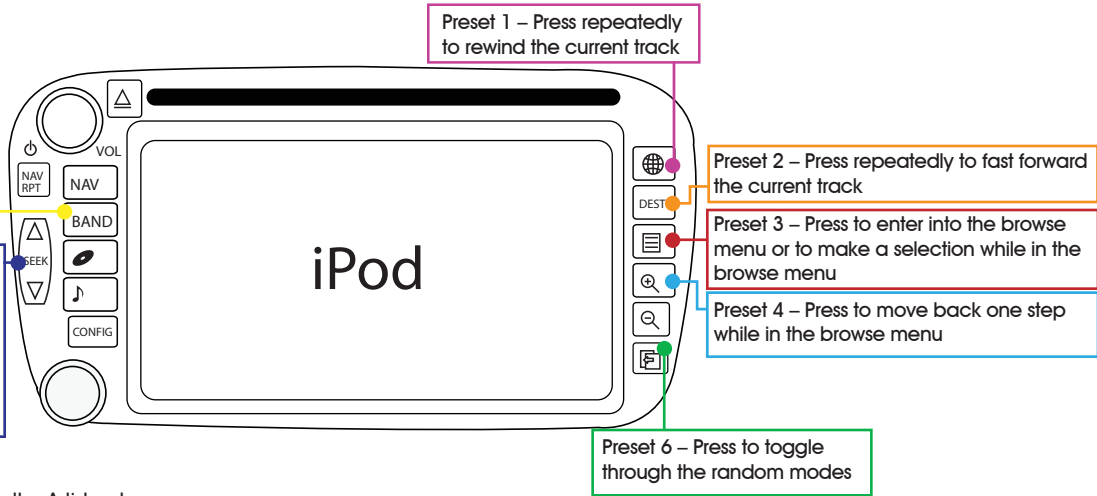

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

1) Press Preset #3 to enter the browse menu
The radio will display "PL:List"

2) Press "Seek Δ" until radio displays "AR:Artist"
Press Preset #3 to select
Radio will display "AR:All"

3) Press the "Seek Δ" button until "Francis Scott Key" is displayed
Press preset #3 to select
The radio will display "AL:All"

4) Press the "Seek Δ" button until "Patriot Hits Vol 1" is displayed
Press preset #3 to select
The radio will display "TR:" followed by the name of the first track in the selected album

5) Press the "Seek Δ" button until "Star Spangled Banner" is displayed
Press preset #3 to select
The song will begin to play and the display will cycle through the display modes

(Actual Radio Appearance may differ from representation.)



Changing Sources (iPod, HD Radio, *Satellite Radio, AUX)

- Press the "Band" button until "XM" is displayed.
- Press the "Seek Δ" button until the source you want is displayed.
- Press Preset 2 to select the source.

*if available

Band Button – press to enter into Sat mode or to switch sources within the Media Gateway.

Seek Buttons

- Press Seek Δ to seek up to the next available station
- Press Seek ∇ to seek down to the next available station



Presets 1-6 – Press to recall a preset station or press and hold to store a station into memory.

HD RADIO EXAMPLE

To select an HD radio station.

Press "Seek Δ" or "Seek ∇" to get to the desired station. The radio will auto lock on to an HD Radio Station if available. When locked into an HD Radio Station, press "Seek Δ" to access multi cast HD stations (if available).

Example: 92.5 HD2 MHZ

To store a radio station into preset memory.

Press "Seek Δ" or "Seek ∇" to get to the desired station. Press and hold the desired preset button (1-6) for three seconds

To recall a station stored into memory

Recall a preset station by pressing its corresponding preset button (1-6).

(Actual Radio Appearance may differ from representation.)