


iPod

****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, Aux)

- Press the "SR" icon on the screen
- Press the "SR123" icon repeatedly to toggle through the Media Gateway sources
- When the "SR123" icon is pressed the radio will display SAT 1, 2 or 3 for a moment then you will see the mode. (ex: HD-FM1, IPOD, AUX or SAT)

*if available

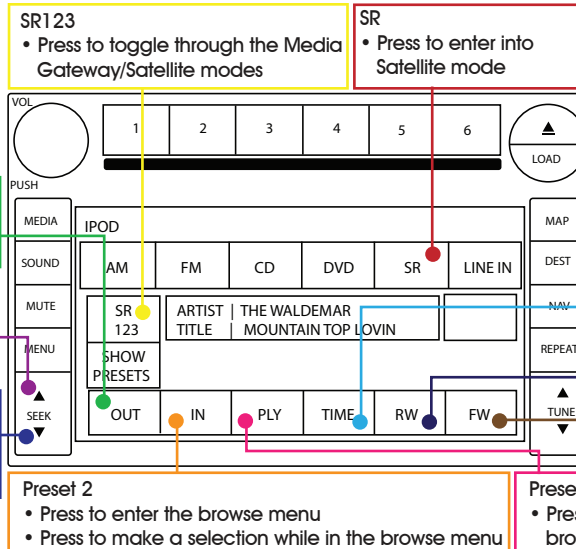

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

Press Preset 2 to enter into the browse menu. The radio will display "PL:LIST"

Press the SEEK ▲ button until radio displays "AR:ARTIST". Press Preset 2 to select. Radio will display "AR:ALL"

Press the SEEK ▲ button until radio displays "AR:Francis Scott Key". Press Preset 2 to select. Radio will display "AL:ALL"

Press the SEEK ▲ button until radio displays "AL:Patriot Hits Vol. 1". Press Preset 2 to select. Radio will display "TR:ALL".

Press the SEEK ▲ button until radio displays "AL:Patriot Hits Vol. 1". Press Preset 2 to select. Radio will display "TR:ALL".


(Actual Radio Appearance may differ from representation.)



****READ THIS FIRST****

Changing Sources (iPod, HD Radio, *Satellite Radio, Aux)

- Press the "SR" icon on the screen
- Press the "SR123" icon repeatedly to toggle through the Media Gateway sources
- When the "SR123" icon is pressed the radio will display SAT 1, 2 or 3 for a moment then you will see the mode. *if available

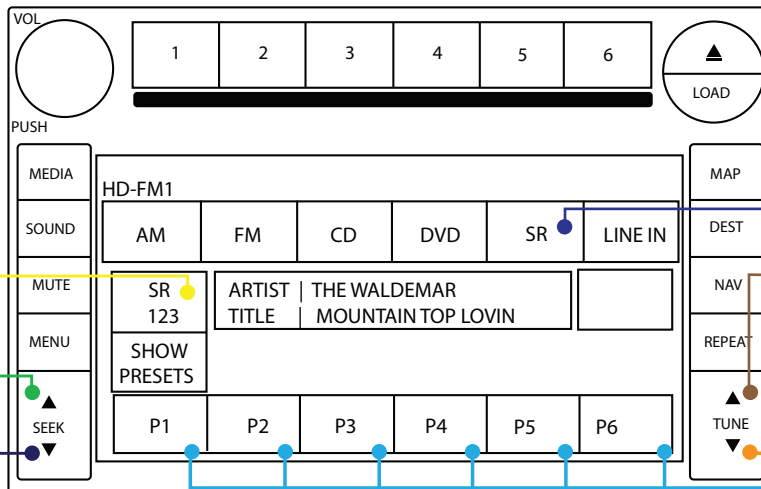

SR123
• Press to toggle through the Media Gateway/Satellite modes

Seek ▲
• Press to seek up to the next available station

Seek ▼
• Press to seek down to the next available station

SR
• Press to enter into Satellite mode

Tune ▲
• Press to tune up one station

Tune ▼
• Press to tune down one station

Presets 1-6
• Press and hold to store a station into memory
• Press and release to recall a station in memory

HD RADIO EXAMPLE

To select an HD radio station.
Press the SEEK ▲ button to get to the desired station. The Radio will auto lock on to an HD Radio Station if available; example: 92.5 HD1 MHZ. When locked into an HD Radio Station, press the SEEK ▲ button to access multi-cast HD Station(s) (if available); example: 92.5 HD2 MHZ

To store a radio station into preset memory.
Press and hold any preset (1-6) to store a station into memory. The screen will display "PR:SAVED"

To recall a station stored into preset memory.
Press and release the desired preset that you wish to recall.

(Actual Radio Appearance may differ from representation.)